




Gooseneck Hitch Installation/Operation Instructions

1-866-41 HITCH



The following instructions should be used to mount gooseneck **AIRSAFE™ AIR RIDE HITCH®** only. Please read and follow instructions before installation. Failure to follow these instructions may void the manufacturer's warranty. Max TW 7,000lbs/Max GTW 25,000lbs. **NOTE: Shock Assembly is required, refer to part drawing for assembly.**

1. Loosen the two set screws that secure the adjustable slide-in hitch and remove the existing hitch from your trailer. Removal and installation may require two people.
2. Install the new gooseneck hitch with the front of the hitch toward the pulling vehicle. (See the "Front install toward vehicle" label on the hitch.) The latch will be on the driver's side. Add any needed spacer rings to produce the proper height and securely tighten the set screws. Be sure and torque the screws to their factory specifications. **DO NOT** install the hitch sideways. Always be sure the "Front" label is towards the towing vehicle.
3. **CAUTION:** No more than 6 1/2" of spacers can be used. The neck of the hitch must also extend up into the trailer tube at least 10". This prevents any extra movement between the hitch and trailer tube. **CAUTION:** There must be a minimum of 7" between the top of the truck bed rails and the trailer frame extending over the truck.
4. Your towing vehicle and trailer should be sitting on level ground. Inflate the airbags. Hook up your trailer by lining up the hitch with your towing vehicle ball mount. Pull the latching handle on the hitch and turn handle to lock latch in the out position. This removes the locking pin and allows the locking device to slide open and the hitch to settle around the towing vehicle ball mount. After the hitch settles into place, turn latch handle until the locking pin is inserted into the locking device, thus locking the trailer to the towing vehicle. Hook up safety chains, brakes, lights and any other required items.
5. After the trailer is connected, inflate or deflate the air springs until the guide pin on the driver's side of the hitch is aligned 1/2" above center of the slot. If you change tongue weight you should add or remove air to keep the pins aligned 1/2" above center of the slot.
6. Should the air leak out of the air springs and the trailer hitch bottoms out (the air spring collapse) inflate the air springs until the pin is realigned with the center of the slot. This will re-establish the proper ride height.
7. To unhook the trailer, pull latch out as in step 4, use your trailer jack to raise the trailer until it lifts off the ball mount. Ensure tail gate is down, brake/light lines and chains are disconnected. Drive vehicle away.

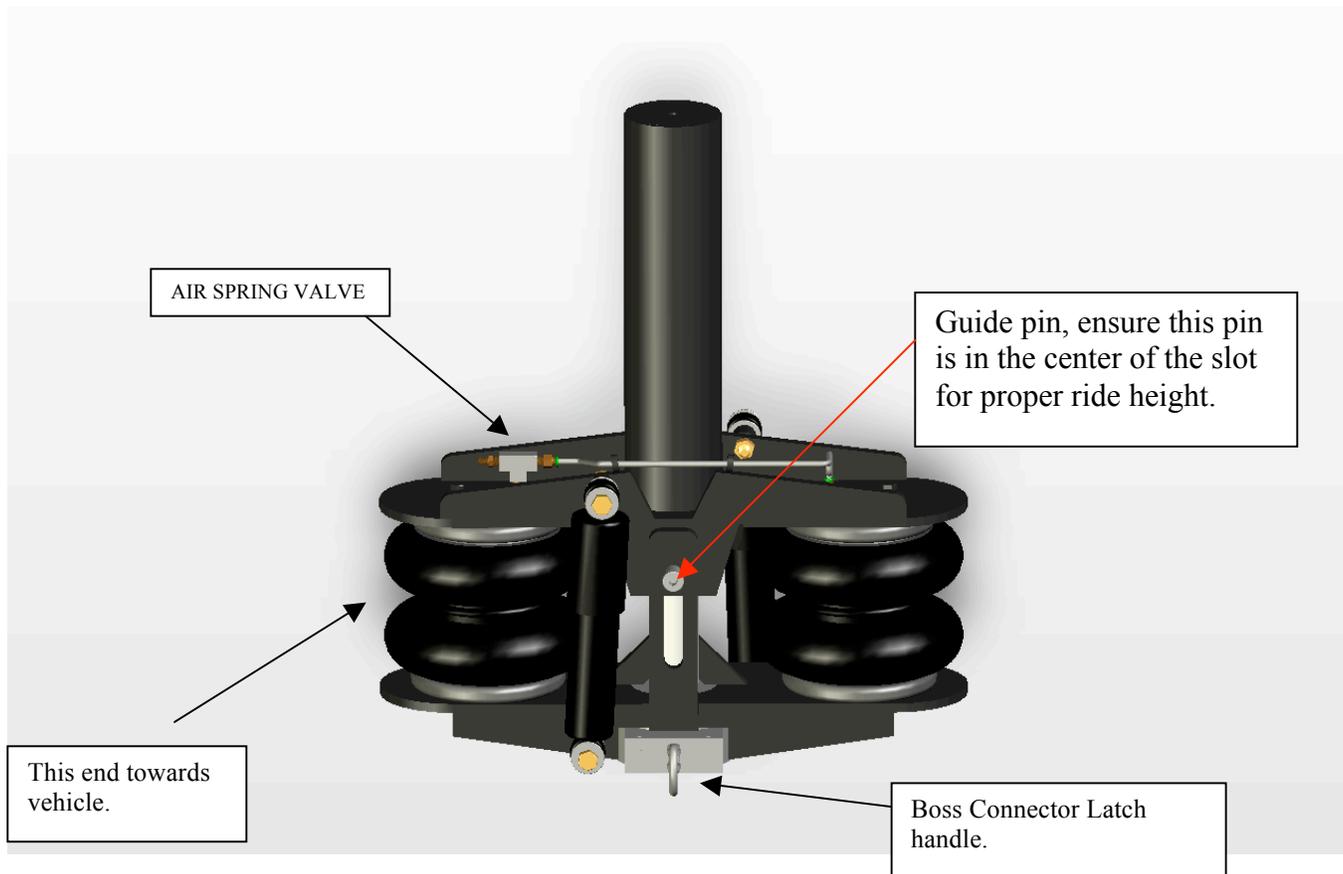

AIR SAFE
GOOSENECK HITCH SYSEM
LIMITED 2 YEAR WARRANTY

The Air Safe Gooseneck Hitch System is warranted against defects in material and workmanship under normal use and service, ordinary wear and tear excepted, for 2 years from the first date of purchase at retail. Any part found to have a defect in material or workmanship, will be repaired or replaced at the manufacturer's option when returned with transportation charges prepaid. Include a copy of the original sales receipt when returned for warranty. This warranty does not cover the condition, durability or appearance of the finished product.

If the hitch is damaged as a result of improper installation, alteration, vehicle accident, misuse of unreasonable use, including but not limited to , loading the product beyond the factory rated load capacity, the manufacturer shall not be required to repair or replace such product. In every case, this warranty covers only the defective part and does not provide for reimbursement of the retail price of the part or labor charges.

The manufacturer shall not be liable for any incidental or consequential damages for breach of any express or implied warranty.

There are no warranties that extend beyond the description on the face hereof. The manufacturer is extending no other warranties, express or implied, nor any warranties of merchantability or fitness for a particular purpose. Any such warranties of merchantability or fitness for a particular purpose are expressly excluded.

This warranty is designed and intended to fully comply with the requirements of the Magnusson-Moss Warranty Act and all regulations issued by the Federal Trade Commission in connection therewith. It is not intended to violate any state law or regulation containing more stringent requirements, and such requirements automatically become part of this warranty insofar as required by that act.

The owner has available the legal remedies provided by the Magnusson-Moss Warranty Act, Public Law 93-637, 99 STAT.2183-2193: 15 U.S.Code, Secs 23021-2312, and any applicable state statutes.

For warranty assistance, contact Air Hitch Technology at 1-866-41-HITCH (1-866-414-4824., weekdays 8:00 AM to 5:00 PM (Central).